

Quick installation guide



Introduction:

Thank you for purchasing the Xtech Articulated Tilt and Swivel Bracket. This product is shipped with all necessary mounting hardware and components. Upon opening the box, make sure that none of these parts are missing and/or damaged before beginning installation.

1. HARDWARE KIT:

Label	Item	Quantity	Image
	Wall mount assembly	1	
A1	M8 lag bolt	4	
A2	M8 concrete anchor	4	
A3	M8 flat washer	4	
B	Flat washer	4	
C1	Bubble level	1	
C2	Spacer	4	
D	M6x20mm screw	4	
E	M8x20mm screw	4	

IMPORTANT:

At least two qualified people should perform the assembly procedure. Personal injury and/or property damage can result from dropping or mishandling the display.

Maximum flat panel weight: 110lb


The wall must be capable of supporting at least five times the weight of the flat panel. Otherwise, the wall structure must be reinforced.

2. WARNING!


- Prior to installing this product, you must read all instructions thoroughly. Keep these installation instructions in an easily accessible location for future reference.
- Safety measures must be practiced at all times during the assembly of this product. Use proper safety equipment and tools for the assembly procedure to prevent personal injury.
- Xtech does not warrant against damage caused by the use of any Xtech mounts for purposes other than those for which it was designed or damage caused by unauthorized attachments or modifications, and is not responsible for any damages, claims, demands, suits, actions or causes of action of whatever kind resulting from, arising out of or in any manner relating to any such use, attachments or modifications.

3. FLAT PANEL ASSEMBLY

Attaching mounting arms to the back of the screen

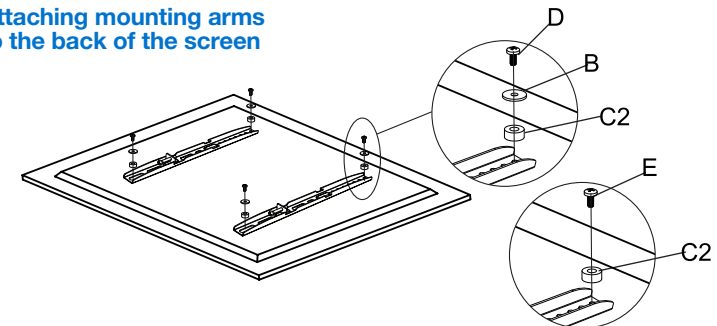


Flat panels with a curved or recessed mounting points

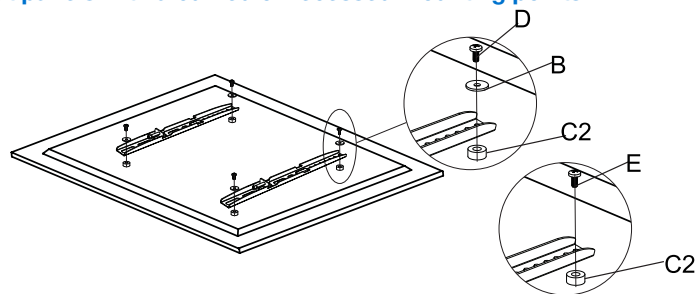


4. WALL INSTALLATION

1. Measure the wall and mark mounting spots.
2. For gypsum or wooden walls, first locate studs in the wall. You may use a stud finder to determine the center of each stud.
3. Next, use the wall plate as a template to mark the first two found stud positions on the wall.
4. Make sure the mounting slots are aligned vertically and centered on the stud.
5. Drill pilot holes using a drill bit.
6. Insert lag bolts and drive firmly into the wall.

Installation on a gypsum or wooden wall

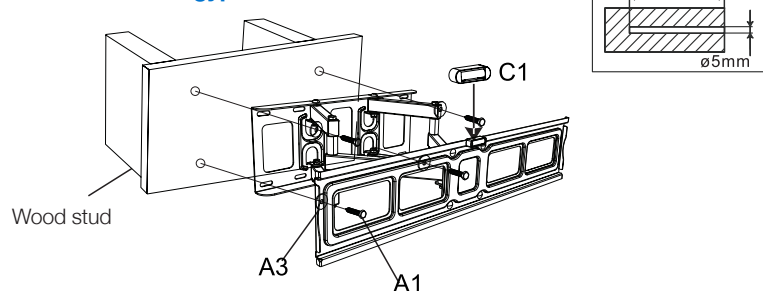


Installation on a concrete or brick wall

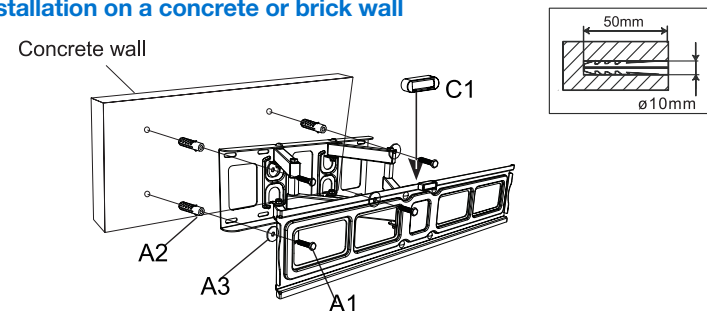

5. FINAL ASSEMBLY

1. Hang the flat panel assembly, adjust the screen at the desired angle and finished by tightening the screw in both mounting arms to securely fasten the display onto the surface.

Hanging your TV on the wall plate and tightening the screw

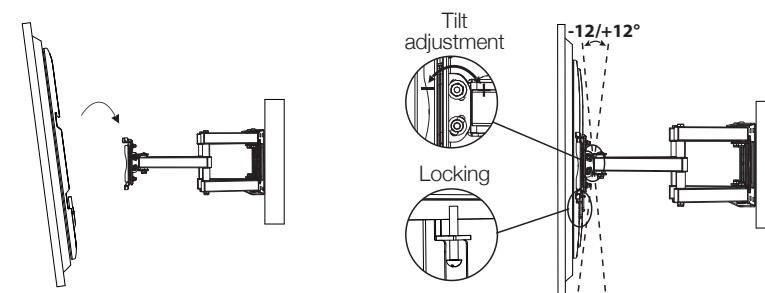

2. The flat panel is now safely attached to the wall.